

Self Assembly sneeze counter – Assembly instructions.

Sneeze counter components include:


- 2 x Side panels with colour coded stickers
- 1 x Top panel with colour coded stickers
- 1 x Front panel with colour coded stickers
- 1 x Pack containing brackets, screws, washers and allen key

PLEASE NOTE:

The side panels, and top/ front panels are equal in size. Also ensure colour coded stickers are facing outward during the assembly. Please refer to the images when assembling the product.

It is recommended that all screws are not tightly screwed into place until the unit is completely assembled as it will improve the overall stability of the unit and performance.

Step 1.

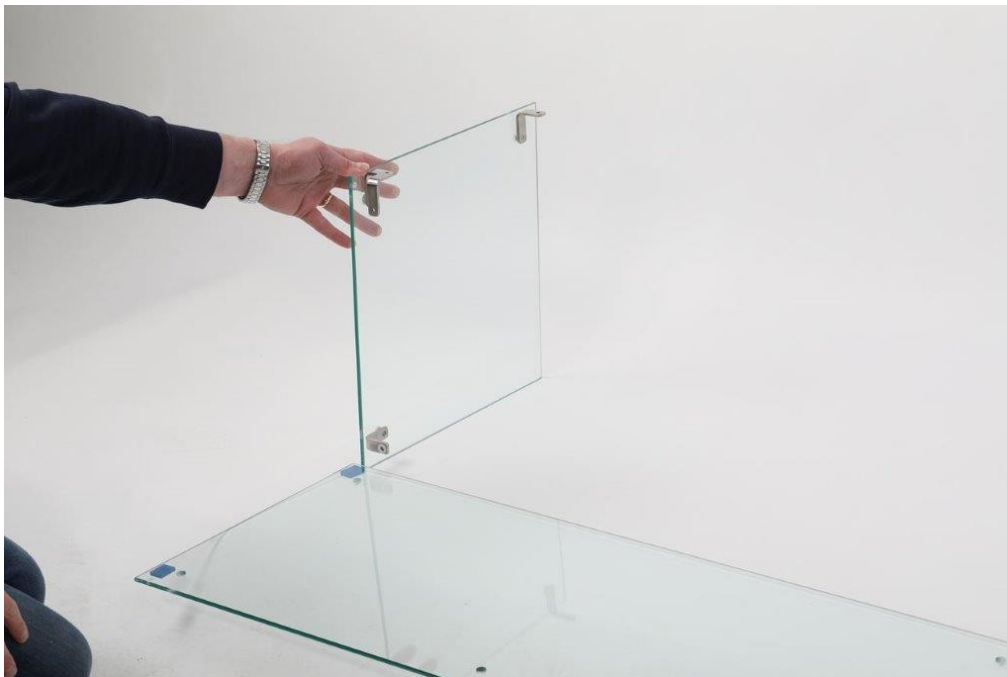

Attach the 3 pin bracket to the upper front facing hole, and 2 x two pin brackets to the lower front and top rear facing holes on the Left hand green coded side panel. Repeat this process for the Right hand Red coded side panel.

Step 2.



Attach the Left hand green coded side panel to the Front panel where the Green stickers meet at the top. Attach a two pin bracket to the central upper hole on the front panel. (THIS PROCESS DOES NOT APPLY TO THE 600mm COUNTER).

Step 3.



Attach the Right hand Red coded side panel to the Front panel where the Red stickers meet at the top.

Step 4.



The counter is now ready to receive the top panel. Place the panel onto the top brackets where Green meets Green, and Red meets Red (See below example).

Fix bracket screws into the brackets. Once the counter is assembled, fully tighten all of the bracket screws to securely complete the assembly.



Finished product.

